


Side 1

Cracker Dish

CUT 1 (PATTERN TOO LARGE FOR SCANNER) AND TAPE IT TOGETHER WITH SIDE 2

****CUT TO SEPARATE THE END PIECES
(DOTTED LINE)

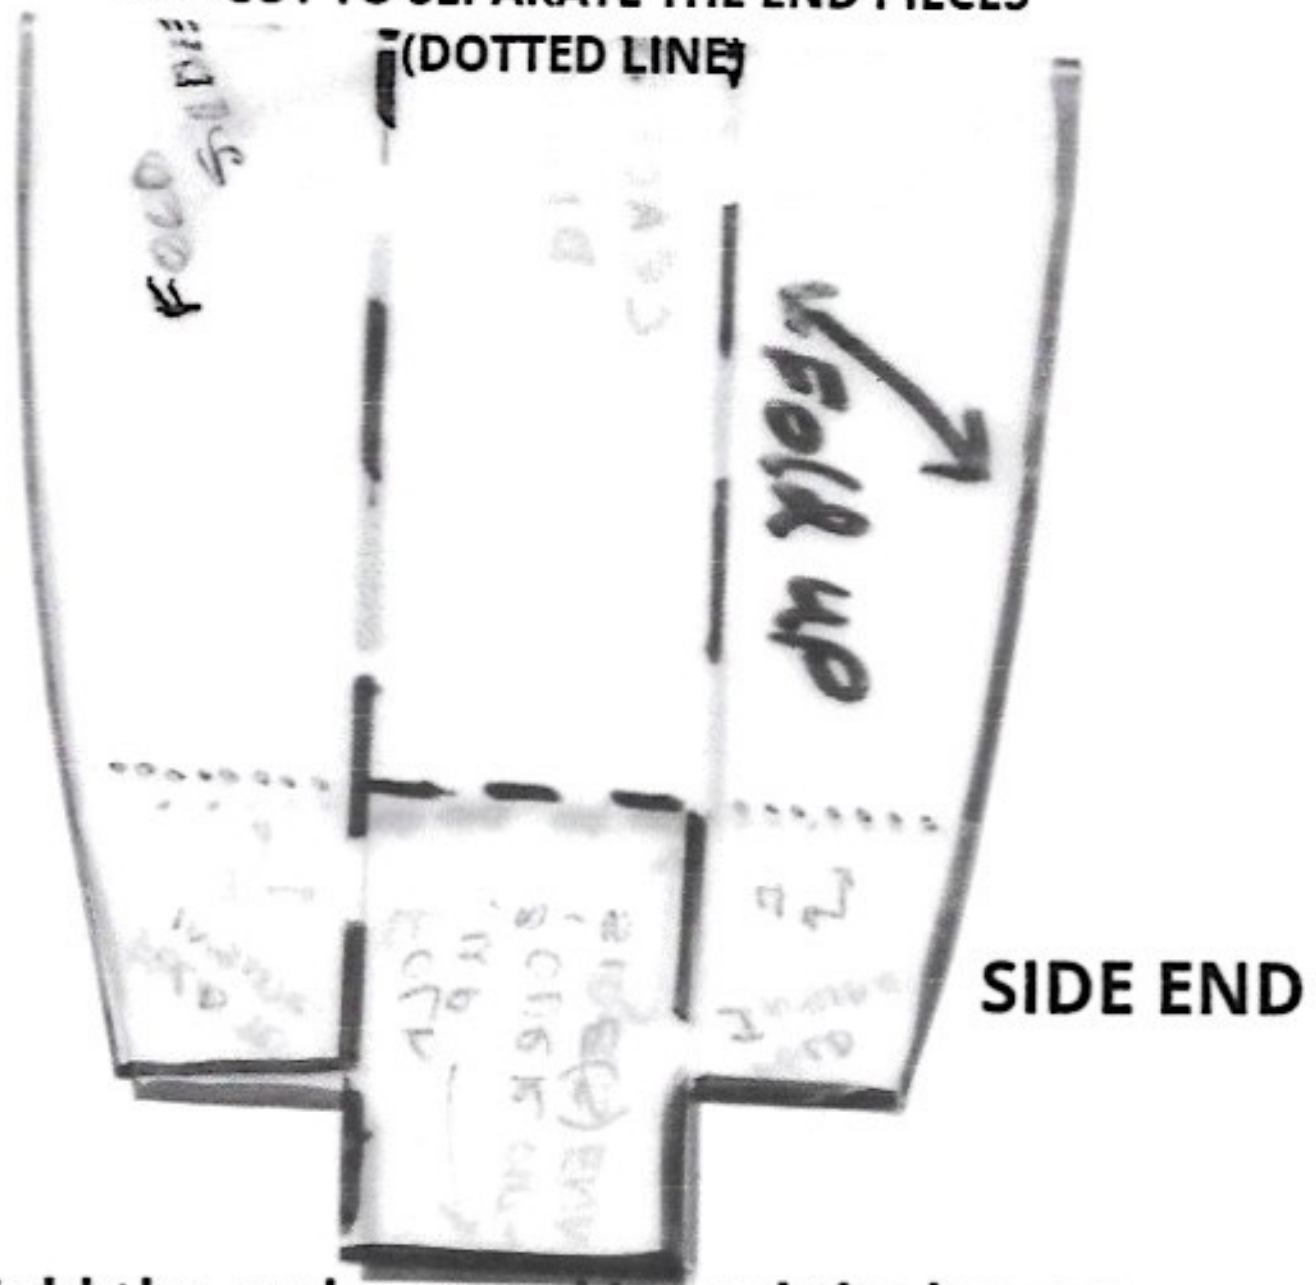


Fold the ends up and in and the longer center piece up and over the ends.

ADD feet if you wish.

CRACKER DISH

DOTTED LINES DOWN THE CENTER INDICATES WHERE TO FOLD THE SIDES OF THE DISH IN AND UP.

FOLD END PIECES UP AND OVER THE SIDES TO ENCLOSE.

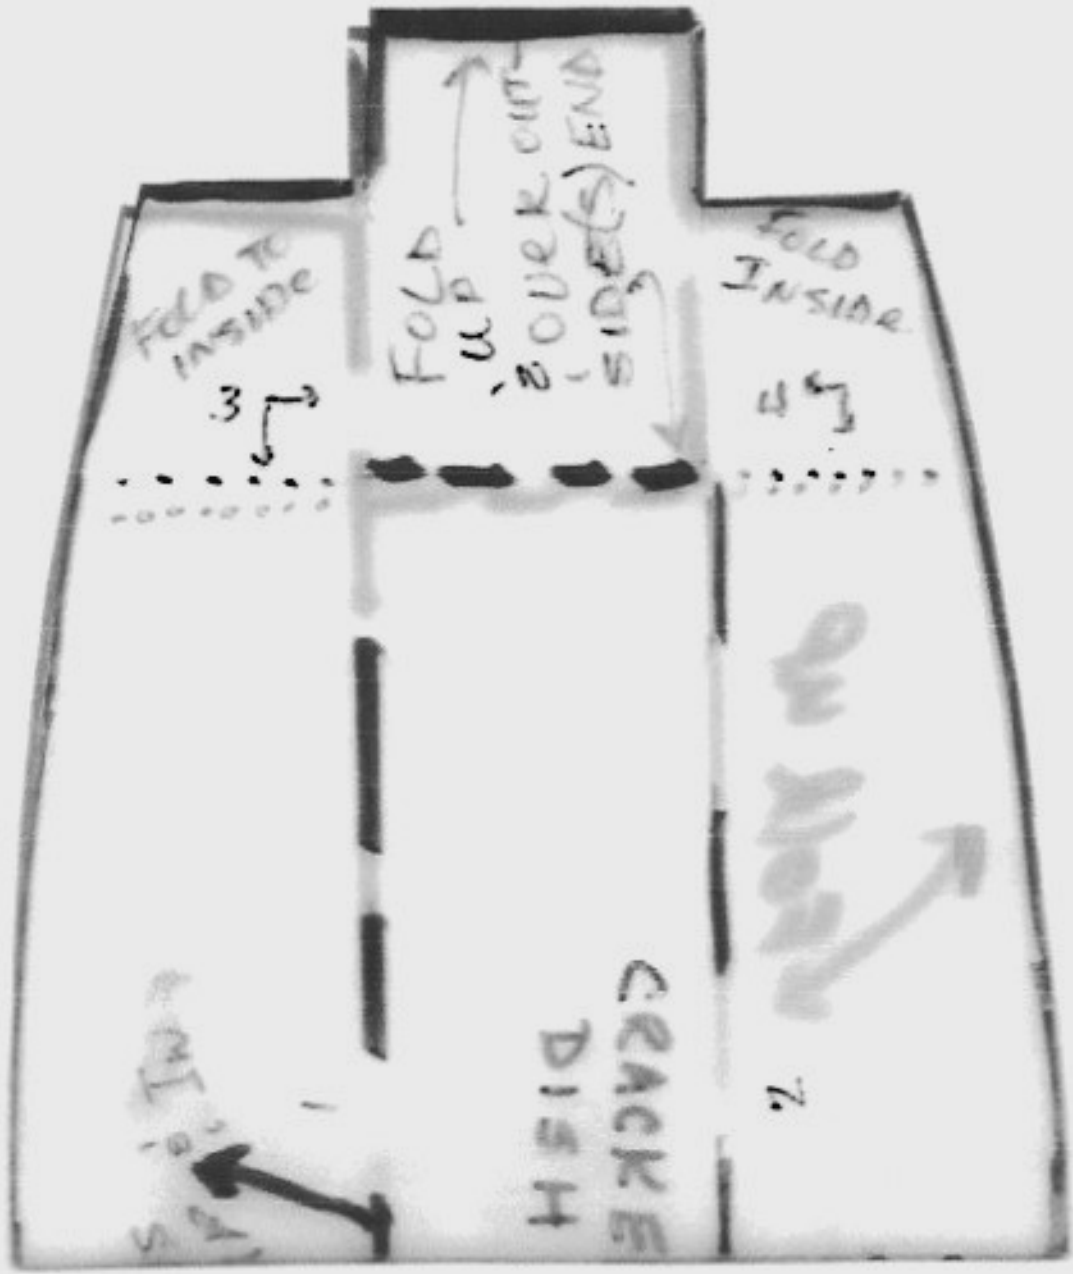

SIDE 2 Cut 1 and tape to other side.

SIDE 2

